



## Fact Sheet

# How to fix & secure cupboard doors

**Dropped cupboard doors and draw fronts not closing properly are a common issue within the home but are easy to fix and secure.**

**To get started you will need...**

- A Phillips screwdriver

### Steps

1. Open the cupboard door that is unlevel or dropped.
2. Locate the hinge and use the screwdriver to ensure all screws are tight.
3. Adjust screw in the middle of the hinge to move the unit door forward or backwards. Be careful not to over tighten the screws.
4. Close the cupboard door to see if this has now lined up. If not repeat steps 1, 2 and 3 until this has been rectified.
5. If you have a loose draw front, check the screws located behind the handle are tightened.
6. Then tighten the screws on the hinges behind the draw front.

---

**We hope this information was helpful. If you are still experiencing problems with your kitchen cupboard doors or draw fronts, you can raise a repair via your online account. You can also find a video to accompany this fact sheet at [greatwellhomes.org.uk](https://greatwellhomes.org.uk)**

---